
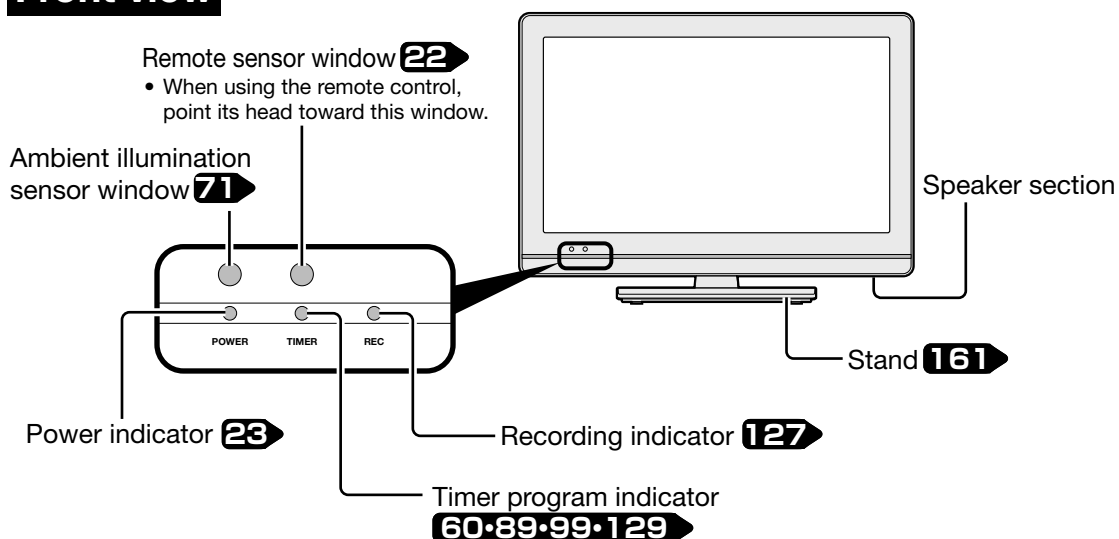


English Guide


Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

Front view



Left side view


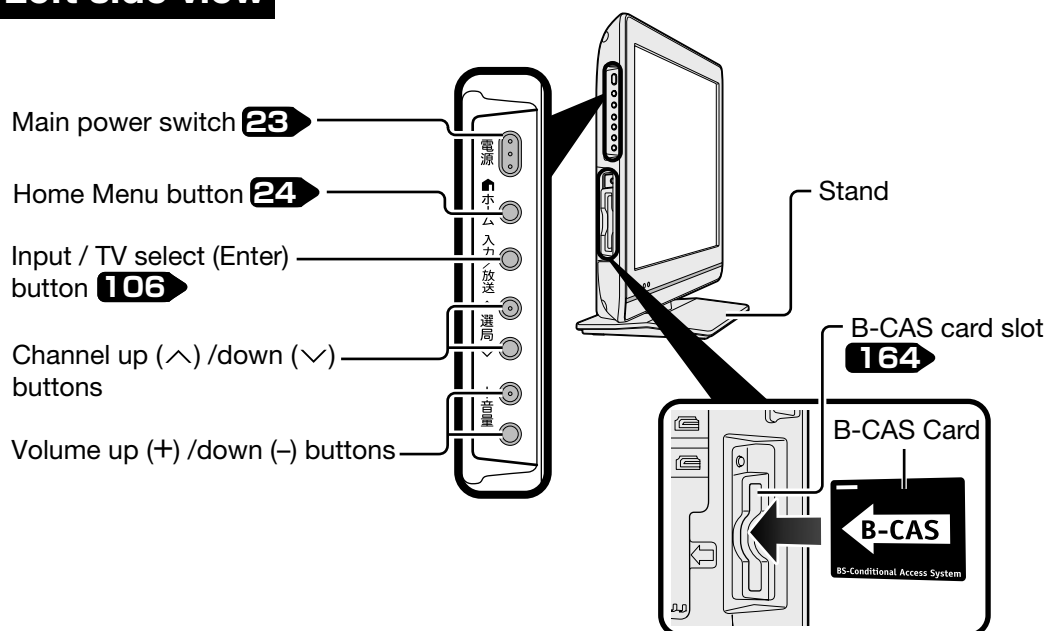


- IC chip side of B-CAS card is turned to a front side of this product, and B-CAS card is inserted.

Back view

The illustrations below are those of LC-19K5.

LC-24K5/LC-22K5/LC-16K5 has the same layout of jacks and terminals as LC-19K5.

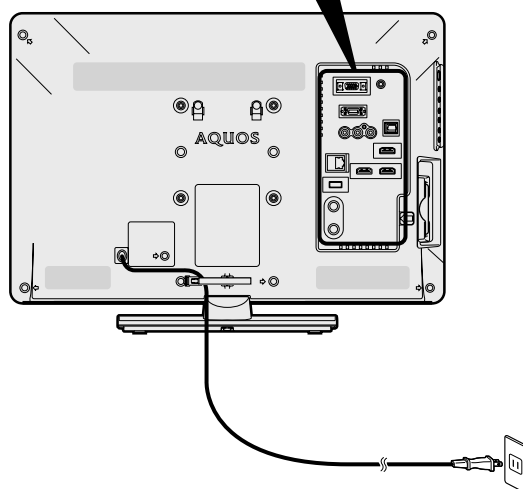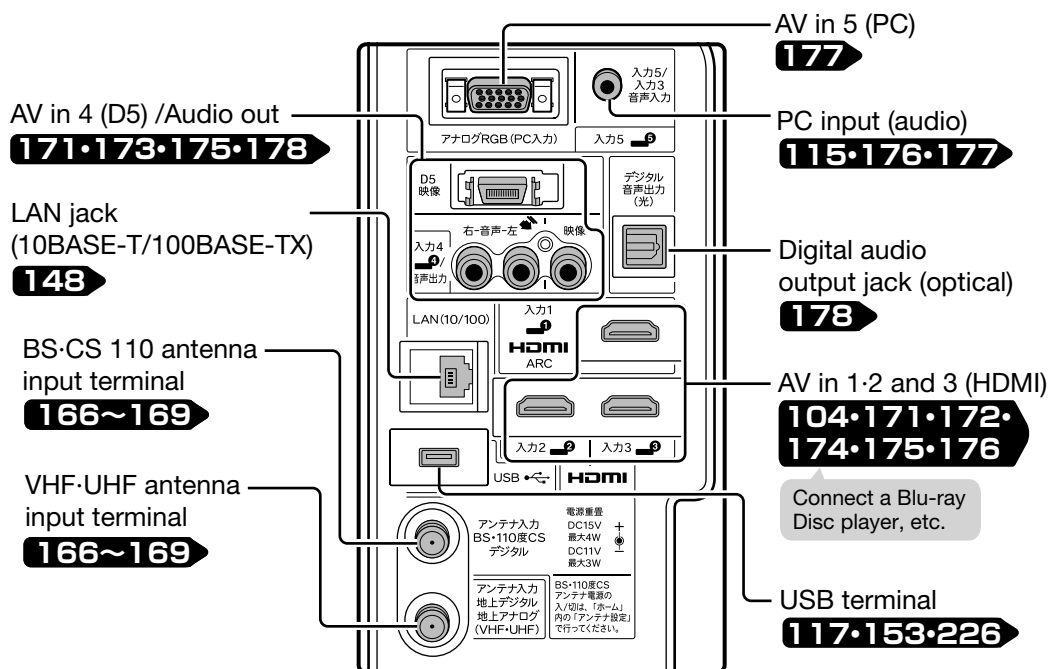

Remote Control Unit

See Page 29 for how to select a program.

Active/Standby **23**

Press to engage the TV set in the active or standby mode.

Display **34•35•231**

Press to display or turn off the channel call, etc.

Recommended programs select **50~51**

Press to select a program which the TV set recommends.

Channel select **29**

- Press to select a channel.
- Use to input a number for various settings.

Linked data broadcast **32**

Volume up (+)/down (-) **29**

Press to adjust the volume.

Mute **29**

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

EPG **42•98•129**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast. Select a future program in EPG to set a timer program.

Program info **35**

Press to display detailed information on the current digital program.

Finish

Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Screen mode **65•113**

Press to select the desired screen mode.

Digital channel number input **31**

Use to select a digital channel by entering the 3-digit channel number.

Media select **29•32**

Sleep timer **82**

Wake up timer **60**

Press to set wake up timer.

Freeze **33**

AV mode select **69**

Terrestrial digital/BS/CS/ Terrestrial analog **29**

Select the CS digital channel for the first time. **185**

Channel up (^)/down (v) **29•39**

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

* CATV channels are factory set to be skipped. **203**

Input select **106**

Display the "Home" Menu **24•25**

Display the Tool Menu **24•25•28**

Cursor (up, down, left, right) **24•25**

Enter/Confirm **24•25**

Return **24**

Color **32•43~47•84**

Use to operate EPGs and data program screens.

Picture select **56**

Caption **56**

Audio select **56**

Split screen **52~53**

Press to switch between the split screen mode and the normal screen mode.


Operable screen **54**

Press to switch the operable screen when the TV set is in the split screen mode.

Familink

94~97•99~102•104•126~128•137~141


Press to operate "Familink" Recorders connected via HDMI cables.

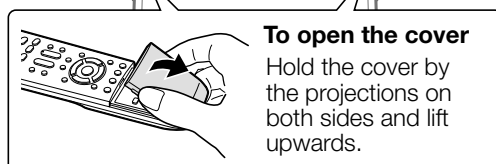

Switching the Display Language to English ホームメニューなどの言語を英語にする


- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。

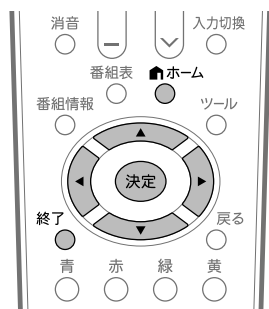

◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

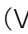- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1
Press

and
select
with


Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



2
Select
with



Select “ (視聴準備)” (View Setting).

「 (視聴準備)」を選ぶ



3

Select
with

Press


Select “Language (言語)”.
「Language (言語)」を選ぶ



4

Select
with

Press


Select “English”.
「English」を選ぶ

Enter.
決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

5

Press



Finish this operation.
終了する

はじめに
お読みください

テレビを見る／
便利な使いかた

ファミリーリンク

ビデオ・オーディオ・
パソコンをつなぐ

USB ハードディスク
をつないで録る・見る

双方向通信／
USBメモリ

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や素子)

English
Guide